


# TOYOTA CLAMP INSTRUCTIONS

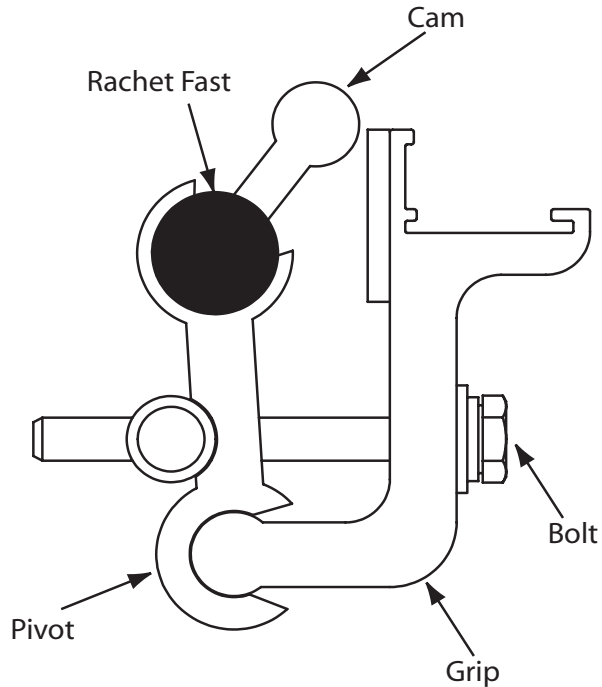

Use short pivot and bolt with existing grip and cam. It is only necessary to remove the ratchet fast retainer from one side. Extra retainers are included in case of loss or damage.