

# !! ATTENTION INSTALLERS !!

## Shimming is required on all truck beds

**WITH THE NEW CANISTER DESIGN IT IS EXTREMELY IMPORTANT TO MAKE SURE THE RAILS ARE SHIMMED CORRECTLY. PLEASE READ THESE INSTRUCTIONS BEFORE PROCEEDING FURTHER WITH THE INSTALLATION.**

Shimming is required to keep the rails parallel and from bowing out when the clamps are tightened. The goal is to have the same "between the rails" measurement (BR) at the front (cab end) of the truck and at the rear (tailgate end) of the truck.

The Chart below notes what the proper "between the rails" measurement should be for each of our canister models.

Locate the model # of your canister by finding the Model # on the sticker in the upper left corner of the canister. Match this number with the numbers on the chart and you will find the correct measurement you should have between the rails in your truck bed.

Before shimming and installing the rail clamps make sure the canister is centered between the truck bed rails.


**IF A GAP EXISTS BETWEEN THE RAIL AND THE BED AFTER THE CORRECT DISTANCE BETWEEN THE RAILS HAS BEEN SET THEN YOU MUST USE SHIMS TO PREVENT THE RAILS FROM MOVING WHEN CLAMPED. (See drawings on reverse side of page)**

PART NUMBER	BETWEEN RAILS (BR) MEASUREMENT
TR2001	51 13/16"
TR2002	51 13/16"
TR2003	58 13/16"
TR2004	58 13/16"
TR2006	53 5/16"
TR2007	59 13/16"
TR2008	59 13/16"
TR2009	42 1/16"
TR2010	50 5/16"
TR2011	50 5/16"
TR2012	61 1/16"
TR2013	61 1/16"
TR2014	60 9/16"
TR2015	60 9/16"
TR2016	53 5/16"
TR2017	57 7/16"
TR2018	57 7/16"
TR2019	48 5/16"
TR2020	45 7/16"
TR2022	59 1/16"


PART NUMBER	BETWEEN RAILS (BR) MEASUREMENT
TR2023	59 1/16"
TR2024	48 11/16"
TR2025	45 3/16"
TR2026	45 7/16"
TR2027	45 7/16"
TR2028	58 13/16"
TR2029	58 13/16"
TR2030	58 13/16"
TR2031	49 7/16"
TR2032	57 13/16"
TR2033	50 1/16"
TR2034	50 1/16"
TR2035	50 5/16"
TR2036	51 3/4"
TR2037	54 1/2"
TR2038	53 5/16"
TR2039	53 5/16"
TR2041	55 5/16"
TR2042	56 1/16"

If the exact measurement can not be reached a slightly smaller between the rails measurement is better then a larger measurement.

**WHEN GAP BETWEEN THE RAIL IS GREATER THAN 3/8" USE SHIM CLAMP (USUALLY IN FRONT NEAREST THE CANISTER)**

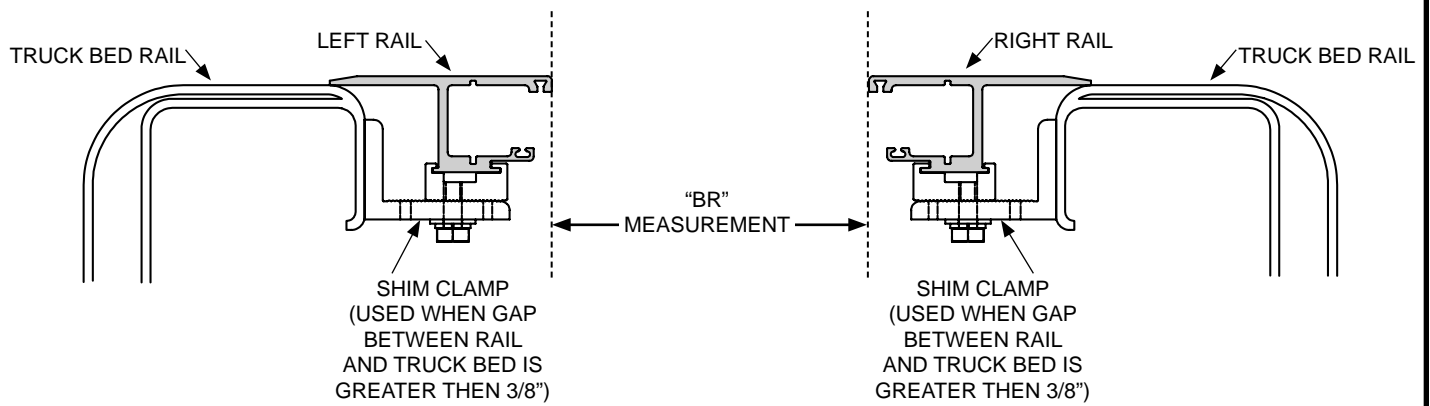

**WHEN GAP BETWEEN THE RAIL IS LESS THAN 3/8" USE THE PLASTIC SHIM PIECES ON THE BACK OF THE SPEED CLAMPS**

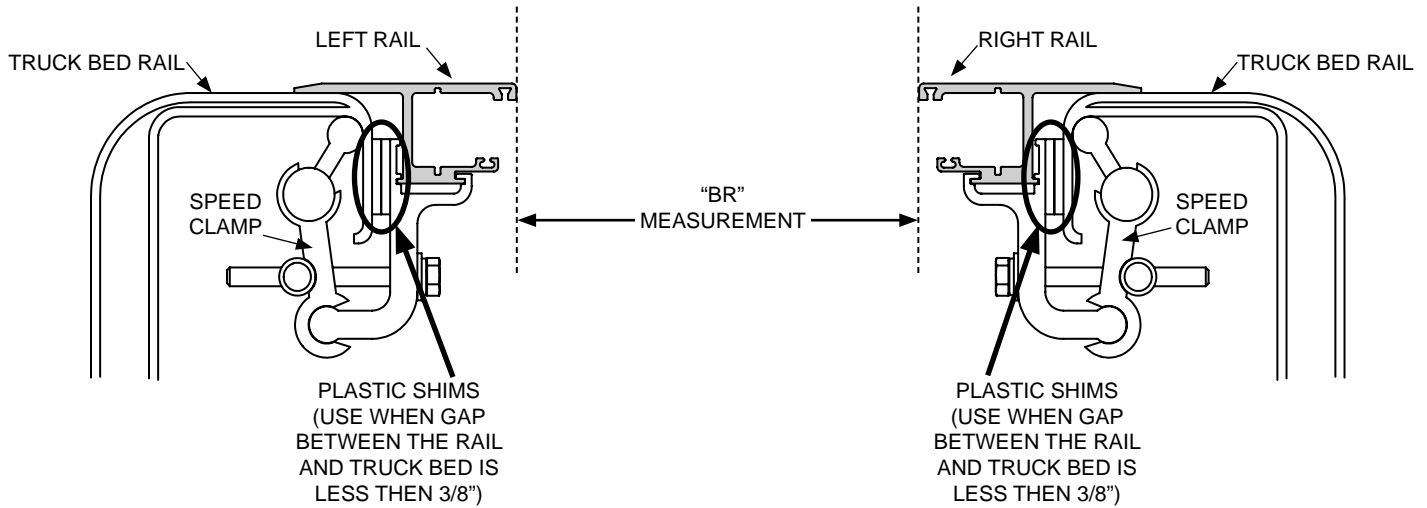

See full details on how to install the speed clamps in the Installation Instructions manual.

If you have any questions please call Pace Edwards Technical Support.

2400 Commercial Blvd, Centralia, WA 98531 USA  
 (360) 736-9991 (main) ♦ (360) 736-9992 (fax)  
**(800) 338-3697** (toll-free)  
 www.paceedwards.com

Thank you for choosing products by...



#1 RETRACTABLE TRUCK BED COVER